

Архангельск (8182)63-90-72
Астана (7172)727-132
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06

Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81
Киргизия (996)312-96-26-47

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Казахстан (772)734-952-31

Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Таджикистан (992)427-82-92-69

Сургут (3462)77-98-35
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93

<https://pnoz.nt-rt.ru/> || pzh@nt-rt.ru

PNOZmulti Toolkit — Технические характеристики

PNOZmulti Toolkit включает в себя все необходимые принадлежности для начала работы с PNOZmulti: папка документации с конфигуратором PNOZmulti на DVD (без лицензии), устройство считывания чип-карт, набор чип-карт (32 Кбайт, 10 штук) и кабель для конфигурации.

PNOZmulti Tool Kit



in the case consisting of: Chip card with 32k and seal PNOZmulti m1p PU: 10 pcs; Chip card reader PNOZmulti; Programming cable PNOZmulti; PNOZmulti System Manual.

Вес брутто:	2510 g
Вес нетто:	2213 g

Принадлежности PNOZmulti

Принадлежности, доступные для PNOZmulti и PNOZmulti Mini, включают соединительный кабель, чип-карты, клеммы, устройство считывания и адаптер чип-карт .



PSS Conv USB / RS 232

Adapter for implementing the USB interface to RS232.



PSEN im1

Interface PSEN im1 for connection and evaluation of several Pressure sensitive mats to the PNOZmulti system; 96 x 48 x 43.5 mm (H x W x D); connection type spring-loaded terminals.



PNOZ msi1 Bp Adapter Si/Ha 25/25 5m

Adapter for PNOZms1p /2p for Siemens/ Heidenhain encoder Length: 5 m.



PNOZ msi1Ap Adapter Si/Ha 25/25 2,5m

Adapter for PNOZms1p /2p for Siemens/ Heidenhain encoder.



PNOZ msi1Bp Adapter Si/Ha 25/25 2,5m

Adapter for PNOZms1p /2p for Siemens/ Heidenhain encoder.



PNOZ msi3Ap Adapter Si/Ha 15/15 2,5m

Adapter for PNOZms1p /2p for Siemens/ Heidenhain encoder.



PNOZ msi3Bp Adapter Si/Ha 15/15 2,5m

Adapter for PNOZms1p /2p for Siemens/ Heidenhain encoder.



PNOZ msi1AP Adapter Si/Ha 25/25 5m

Adapter for PNOZms1p /2p for Siemens/ Heidenhain encoder. Length: 5 m.



PNOZ msi b4 Box

PNOZ msi adapter for non safety-related encoders with reference sensor.



PNOZ msi10p Adapter Cable 2,5m

PNOZ msi10p Adapter Cable 2.5.



PNOZ msi11p Adapter Cable 1,5m

PNOZ msi10p Adapter Cable 1.5 m.



PNOZ msi 9p adapter cable 5m

Adapter for speed monitoring module modular safety system.



PNOZ msi5p Adapter Bo/Rex 15/15 2,5m

Adapter for speed monitoring module modular safety system.



PNOZ msi5p Adapter Bo/Rex 15/15 1,5m

Adapter for speed monitoring module modular safety system.



PNOZ msi6p Adapter Elau 9/9 7,5m

Adapter for speed monitoring module modular Compatible with Elau drives.



PNOZ msi6p Adapter Elau 9/9 2,5m

Adapter for speed monitoring module modular safety system.



PNOZ msi6p Adapter Elau 9/9 1,5m

Adapter for speed monitoring module modular safety system.



PNOZ msi8p Adapter Lenze 9/9 2,5m

Adapter for speed monitoring module modular safety system.



PNOZ msi8p Adapter Lenze 9/9 1,5m

Adapter for speed monitoring module modular safety system.



PNOZ msi7p Adapter SEW 15/15 2,5m

Adapter for speed monitoring module modular safety system.



PNOZ msi7p Adapter SEW 15/15 1,5m

Adapter for speed monitoring module modular safety system.



PNOZ msi4Bp Adapter SMC30 15/15 1,5m

Adapter for PNOZ msXp for connecting Bosch/Rexroth drive, length 1.5 m.



PNOZ msi16p ADAPTER Baumuell 15/15 2,5m

Adapter cable for PNOZ ms1p/PNOZ ms2p for connecting to Baumüller drives. Length: 2.5 m.



PNOZ msi12p Rockwell 15/15 2,5m

Adapter for speed monitoring module modular safety system in accordance with EN 60204-1 11/98 and IEC 60204-1, 10/97.



PNOZ msi13p Fanuc 20/20 2,5m

Adapter for speed monitoring module modular safety system in accordance with EN 60204-1 11/98 and IEC 60204-1, 10/97.



PNOZ msi S09

Universal Adapter, 9-poles D-Sub for use with PNOZms1p or PNOZms2p.



PNOZ msi S15

Universal Adapter, 15-poles D-Sub for use with PNOZms1p or PNOZms2p.



PNOZ msi S025

Universal Adapter, 25-poles D-Sub for use with PNOZms1p or PNOZms2p.



PNOZ msi15p Adapter Tendo 15/15 2,5m

Adapter for speed monitoring module modular safety system in accordance with EN 60204-1 11/98 and IEC 60204-1, 10/97; for connector SS X1.



PNOZ msi 17p Bos/Rex 15/15 4,0m

Adapter for PNOZms1p /2p for Bosch/Rexroth. Length: 4 m.



PNOZ MSI1AP ADAPTER SI/HE 25/25 1,5M

Adapter cable for PNOZms1p/2p for Siemens/Heidenhain encoder



PNOZ MSI1BP ADAPTER SI/HE 25/25 1,5M

Adapter cable for PNOZms1p/2p for Siemens/Heidenhain encoder



PNOZ msi14p Leroy 15/15 2,5m

Adapter for PNOZms1p /2p for Siemens/ Heidenhain encoder Length: 5 m.



PNOZ msi b1 Box

Adapter box for speed monitoring module modular safety system PNOZmulti 3 x 15-pole D-sub connector. 2 x connector female, 1 x connector male Can be clipped on to a mounting rail.



PNOZ msi b0 cable 15/RJ45

Cable with 15-pole D-sub connector for adapter box PNOZ msi b1 (#773880). Cable length 0.3 m.



PNOZ msi b1 Box 9p

Adapter box for speed monitoring module modular safety system PNOZmulti 3 x 9-pole D-sub connector. 2 x connector female, 1 x connector male Can be clipped on to a mounting rail.

PNOZ msi b1 Box 25p

Adapter box for speed monitoring module modular safety system PNOZmulti 3 x 25-pole D-sub connector. 2 x connector female, 1 x connector male. Can be clipped on to a mounting rail.



PNOZ msi b0 cable 25/RJ45

Cable with 25-pole D-sub connector for adapter box PNOZ msi b1 (#773883). Cable length: 2.5 m.



PNOZ mli1p 5m

Cable for safe connection of 2 PNOZ ml1p; 5-poles shielded; terminal with screw connection; length: 5 m.



PNOZ mli1p 10m screw

Cable for safe connection of 2 PNOZ ml1p; 5-poles shielded; terminal with screw connection; length: 10 m.



PNOZ mli1p 50m

Cable for safe connection of 2 PNOZ ml1p; 5-poles shielded; terminal with screw connection; length: 50 m.



PNOZ mli1p 5m

Cable for safe connection of 2 PNOZ ml1p; 5-poles shielded; spring-loaded terminal, length: 5 m.

PNOZ mli1p 10m

Cable for safe connection of 2 PNOZ ml1p; 5-poles shielded; spring-loaded terminal, length: 10 m.



PNOZ mli1p 50m

Cable for safe connection of 2 PNOZ ml1p; 5-poles shielded; spring-loaded terminal, length: 50 m.



PNOZ mli1p 1,5m spring

Cable for safe connection of 2 PNOZ mli1p; 5-poles shielded; spring-loaded terminal, length: 1.5 m.



PNOZ mli1p 1,5m screw

Cable for safe connection of 2 mli1p; 5-poles shielded; terminal with screw connection; length: 1.5 m.



KOP-XE

PNOZplus, PNOZpower, PNOZmulti Coupling connector; replacement needs.



PNOZmulti Bus-Terminator

Terminator PNOZmulti.

PNOZmulti Bus-Terminator coated

Terminator PNOZmulti varnished version.



PNOZmulti Chipcard Set 10 piece

PNOZmulti chip card set 10 pieces 8kB

Архангельск (8182)63-90-72
Астана (7172)727-132
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06

Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81
Киргизия (996)312-96-26-47

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Казахстан (772)734-952-31

Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Таджикистан (992)427-82-92-69

Сургут (3462)77-98-35
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93

<https://pnoz.nt-rt.ru/> || pzh@nt-rt.ru